

Detail : Heat Exchanger Installation

No Scale

Notes :

- 1. When using Flanged, Welded or Grooved Pipe provide a Flow Meter Station without a Balancing Valve as specified.
- 2. Use Valve as a Balancing Valve with a Memory Stop.
- 3. Where Multiple Heat Exchangers are Installed This Detail is Typical for each Heat Exchanger.
- Construct Support Frame for the Number of Heat Exchangers Specified. Submit Details to A/E & UMB for Approval.
- ** 5. For X & Y Provide the Minimum Lengths of Straight Pipe per Manufacturer's Recommendations for each Flow Meter Fitting.
- 6. See Valve and Fitting Installation Detail for Additional Requirements