


Detail : Horizontal Fire Damper Installation

No Scale

Notes :

1. Fire dampers to have breakaway joint between collars and duct. (collars shall be integral with fire dampers frame.)
2. Fire damper shall be u.l. labeled.
3. Galvanized sleeve and frame construction shall be minimum 20 ga. should duct be heavier than 20 gauge, provide sleeve and frame to match duct construction.

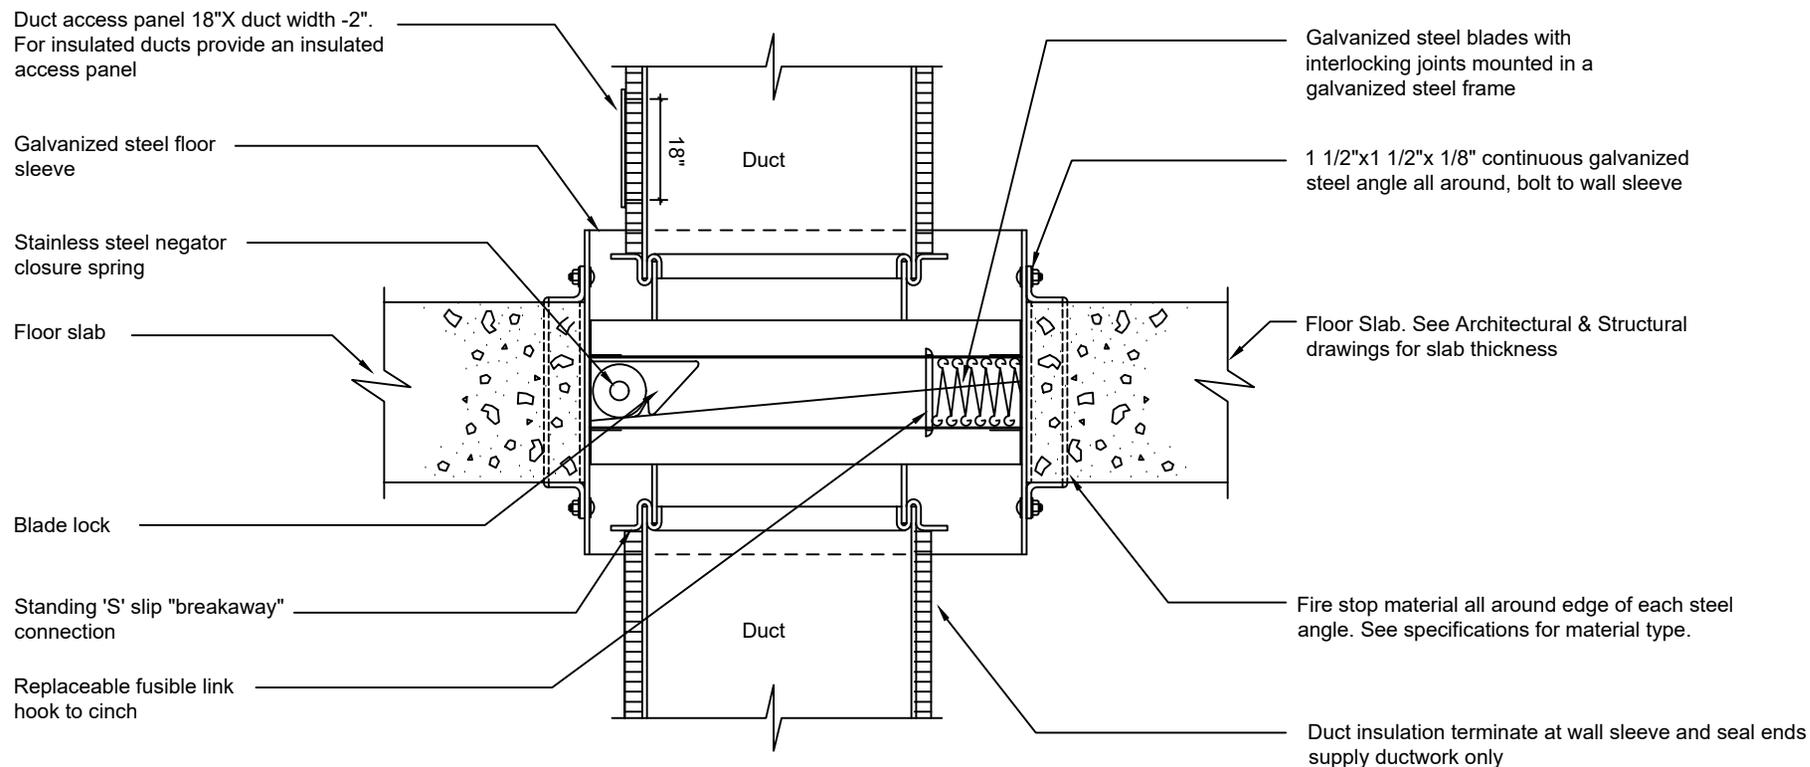

Detail : Vertical Fire Damper Installation

No Scale

Notes :

1. Fire dampers to have breakaway joint between collars and duct. (collars shall be integral with fire dampers frame.)
2. Fire damper shall be u.l. labeled.
3. Galvanized sleeve and frame construction shall be minimum 20 ga. should duct be heavier than 20 gauge, provide sleeve and frame to match duct construction.